

Installing the USB to Serial Adapter Drivers for earlier versions of Microsoft Windows

To install the USB to Serial adapter drivers on earlier versions of Windows including Windows XP.

1. Remove the USB to Serial adapter and reset your PC
2. Do not plug the USB to Serial adapter to your PC until you are prompted
3. Double click on the *HL-340.EXE* file inside the CH240 folder on the accompanying CD to install the USB to Serial adapter software
4. When the **Setup V1.40** window comes up, click the **[INSTALL]** button and wait for a few seconds for the files to copy over and for the **DriverSetup** window to come up
5. When the **DriverSetup** window comes up, insert the USB to Serial adapter to a COM port of your choice on your PC. Windows will take a few seconds to identify the device
6. Click on the **[OK]** button to close the **DriverSetup** window
7. When the **Found New Hardware Wizard** window opens, select the **No, not this time** option.
8. Click on the **[Next >]** button to continue
9. When the **Found New Hardware Wizard** asks from where to install the drivers select, **Install the software automatically (Recommended)**.
10. Click on the **[Next >]** button to continue
11. When the **Hardware Installation** window comes up, click on the **[Continue Anyway]** button to install the drivers
12. Once the drivers have been installed, press **[Finish]** on the **Found New Hardware Wizard** window to finish installing the drivers
13. Finally, close the **Setup V1.40** window

Uninstalling the USB to Serial Adapter Drivers

To uninstall the USB to Serial adapter drivers :

1. Make certain that the USB to Serial adapter is plugged into your PC
2. Double click on the *HL-340.EXE* file on the accompanying CD
3. When the **Setup V1.40** window comes up, click the **[Uninstall]** button
4. When the **DriverSetup** window appears, click on the **[OK]** button.
5. Remove the USB to Serial adapter from your PC
6. Reset your PC